


User Guide

Infra-Red Remote Control (Part No CSA-IRR)

Infra-Red Remote Control Operation

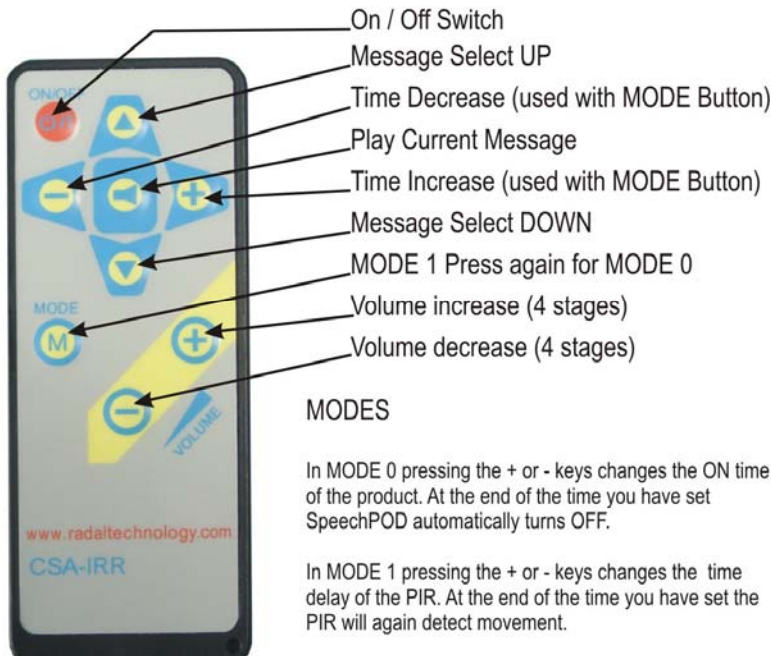

Infrared Remote Control (CSA-IRR)

The infrared remote control is available as an optional extra and allows the user to control SpeechPOD from distances (line of sight) of up to 9m away; it also provides access to a number of advanced functions. *Note: The remote control is supplied with a battery isolation tab, which must be removed prior to operation by pulling the red plastic tab out of the battery compartment.*

Before using the remote control to select messages or change mode timers, please ensure that switch 1 inside SpeechPOD is in the Off (down) position. *Note: with switch 1 in the 'On' position, it is only possible to use the remote control to turn SpeechPOD On, Off, or to verify or play the current message.*

Controls

ON/OFF

This switch is used to turn SpeechPOD On or Off. The current message will be played when the unit is turned ON, and an "Off" message will be given when turned off.

Centre Button (Speaker Symbol)

The currently selected message will be played when this button is pressed. This function can be used to verify the message currently selected.

Radal Technology Ltd
Unit 1 Webber Court
Billington Road
Burnley
Lancashire BB11 5UB
England

Issue No: CSA-IRR Guide

Phone: +44 (0)1282 463 770
Fax: +44 (0)1282 463 771
Email: info@radaltechnology.com



Installation Guide

Infra-Red Remote Control (Part No CSA-IRR)

Up and Down Arrows (▲▼)

Selects the message to be played. Use these controls to scroll up or down until the desired message is found. The current message selected will be played each time a button is pressed.

Mode Select (M Symbol)

This button is used in conjunction with the minus and plus controls (see below). Operation causes either mode 1 or 0 to be enabled. A voice message “one” or “zero” is given each time a key-press is made, to identify the current programming mode selected.

Minus and Plus (-/+) Symbols

Depending upon the mode selected (see above), these controls allow the following advanced functions to be set:

In Mode 0 – Automatic Switch-off Timer

Whenever SpeechPOD is turned ‘ON’ using the remote control, it is possible to select a pre-set running period, after which SpeechPOD will automatically turn ‘OFF’. This feature is useful where there is a known messaging period and an operator may not be available to manually de-activate the system e.g. a wet floor message following cleaning. The following ‘ON’ periods are available; a voice message is given to confirm the current selected time:

Continuous (factory default), 10, 20, 30, 40, 50, 60 Minutes

In Mode 1 – Message Repeat Delay

This function sets the minimum delay period before a repeat message is possible. A voice message is given confirming the following timer selection:

Zero (factory default), 30, 60, 90 seconds, 3 or 5 minutes.

Volume Control

Use the + and – control to select the desired volume.

Radal Technology Ltd
Unit 1 Webber Court
Billington Road
Burnley
Lancashire BB11 5UB
England

Phone: +44 (0)1282 463 770
Fax: +44 (0)1282 463 771
Email: info@radaltechnology.com

Issue No: CSA-IRR Guide

